

PRINTING YOUR PICTURE IN JUST 5 STEPS

STEP ONE

Fully open the wings on your KiiPix and slide the white frame from the central cover. The lens will 'pop-up' ready to print your image. Close the wings until you hear them 'click' into place. The wings are now ready to sit the frame on top in step 3.



STEP TWO

Set your phone screen brightness to maximum, turn off auto-lock to prevent your phone going into standby mode and activate screen lock to keep your screen from rotating.



TIPS:

- Put your phone into 'airplane' mode to prevent interruptions.
- If your image is printing too dark try increasing the brightness of the image in in photo settings.
- Make sure that the background light is not too strong or too dark (normal room light is perfect). Strong outdoor sunlight or a dark room will affect the picture quality.
- Change Auto-Lock /Sleep to 5 minutes.
- Turn off Auto-Brightness /Automatic brightness.

STEP THREE

Place the KiiPix frame on your phone and then place on top of the KiiPix making sure to align the double and single locating lugs on the frame and KiiPix wings. If this is the first time you are using the frame, remember to remove the plastic protectors on the anti-slip strips.



TIPS:

- A person icon is printed on the white frame to show you what way round your image will print.
- The white frame has two hooks on one end and a single wider hook on the other. These align with the locating lugs on the wings. When the frame is in the correct position it will 'lock' in place to stop the frame moving.

KiiPix™

Take it. Print it. Keep it.

This guide takes you through the process of printing a picture and assumes you have already installed your film cartridge.

For instructions on how to insert film cartridges please refer to your Quick Start Guide.

For a complete User Manual, FAQs, trouble shooting and care instructions visit www.tomy.com/kiipix

TOMY®

STEP FOUR

Use the reflective mirror to ensure photo is aligned correctly and the screen is still on. Press the shutter button making sure it is pressed down fully before releasing.



TIPS:

- Hold the phone on the frame to prevent movement when you press the shutter.
- Use the KiiPix when it is placed on a solid surface for best results.

STEP FIVE

As soon as you release the shutter, continually turn the print dial in a clockwise direction until the film is released. It is not necessary to remove the KiiPix frame and your phone from the wings before turning the dial.



TOP FILM TIPS

- You can store film in the fridge for longevity. Just remember to take it out 12 hours before using it so the film can reach room temperature again.
- Do not put any pressure or press on the film as this will damage it.
- Do not shake the film.

HINTS AND TIPS FOR PERFECT PRINTS

Will the KiiPix work with phones with premium glass screen protector?

- Yes! Your KiiPix will work with phones protected by a premium glass screen cover fitted however best results are achieved with no screen protector. Lower quality, cheaper screen protectors can significantly affect the quality of your prints.

Will the KiiPix work if my screen is broken or cracked?

- Anything on the screen will be reproduced on the photo – this includes cracks, marks or foreign objects like hair or dirty marks.

Will the KiiPix work with my phone case fitted?

- Your KiiPix will work with thinner phone cases fitted on your phone however you may find that thicker cases lift the phone too far away from the frame and the KiiPix lens resulting in poor picture quality. For best results we recommend removing your phone from its protective case.

Will the KiiPix work with all type of phones?

- The KiiPix will work with any phone that fits on the frame. Phones that have a smaller screen size than the KiiPix print area will have black areas where there is no image to print.

How do I know if the frame is printing the right way round?

- Make sure that the person icon printed on the white frame is the right way up when you frame your picture before placing it on the KiiPix wings and printing.
- The small reflective mirror on the KiiPix can also show you which way round your photo will print. As pinhole cameras reverse the image, with the KiiPix positioned so that the dial and shutter button are on the right hand side of the printer your picture should appear to be upside down in the mirror.

My picture rotates when I lay the frame on the wings

- Turn your screen lock on to prevent the screen rotating.

My screen goes dark before I can print my picture

- Turn off auto-lock via your phone settings.

What if I get a phone call or notification when printing?

- To prevent interruptions when you are printing your picture activate 'airplane' or 'Do Not Disturb' mode on your phone.

My picture came out blurry

- Ensure you print your image with one press of the shutter and turn the dial quickly in a clockwise direction without any interruption.
- Place your hand on your phone when pressing the shutter to prevent movement.

My pictures are printing too dark / too light

- Check your brightness is set to the maximum.
- Try increasing the brightness or the contrast of the picture. Customising a dark picture before you print will give you best printout results.
- Make sure that the background light is not too strong or too dark (normal room light is perfect). Strong outdoor sunlight or a dark room will affect the picture quality.
- When the film first comes out – keep it face down (black side up) for about a minute. This will help reduce the possibility of over-exposure (photographs being too light).
- Change Auto-Lock / Sleep to 5 minutes.
- Turn off Auto-Brightness / Automatic brightness.

There are white lines / light spots / marks on my picture printout

- Ensure you print your image with one press of the shutter and turn the dial quickly in a clockwise direction without any interruption to reduce these appearing.
- If white lines do appear they will normally disappear after between 20 minutes and 2 hours after the photo is printed and as it continues to develop.

There are bright shadows near the edges of my picture printout

- If you are printing your picture in a very bright environment it is possible to have some light spillage on your picture printout. To prevent this move to a less bright location or cover the open sides of the KiiPix when pressing the shutter to prevent excess light leaking onto your picture.

Pictures have stopped coming out

- If the dial continues to turn but no film is released you could have run out of print film. On the bottom of the KiiPix is a small number window which shows how many prints you have left. When you first remove the blank protector film the number shown will be 10, this decreases by 1 each time you print an image. If the dial shows an 'S' you have run out of prints and you need to replace your film cartridge. (See your Quick Start Guide for instructions).
- If the print number display shows a number from 10-1 check that you are rotating the print release dial in a clockwise direction.

It is sometimes hard to turn the dial / My pictures are getting jammed

- Always turn the dial clockwise.
- Initially the dial will turn easily, it will then become a bit more difficult to turn whilst the film is released from the film cartridge and then the dial will turn more easily again. Keep turning until you feel a 'bump'. Turn only until the film is released.
- Try turning the dial whilst holding the KiiPix directly in your hands instead of on a table. This will give you more space for your hand to rotate the dial.

The film in my KiiPix has jammed

- If the film gets jammed, remove the film case and one photo then re-insert. This should be performed in a darkened room to reduce the risk of damage to the remaining unused photos.